

Projector Power

Push the Display Power Button and hold for 2 seconds to turn the projector on. Push and hold the Display Power Button for 2 seconds to turn the projector off.

Projector Mute

Push the Display Mute Button to hide the projector image without turning the projector off. Push the Display Mute Button again to show the projector image.

Screen Up/Down

Push the Room 1 Button to bring the screen down. Push the Room 1 Button again to raise the screen.

Volume

Use this knob to increase or decrease the volume for the computer, laptop, or DVD/VCR.



Windows Computer

Press Button 1 to show the Windows Computer on the projector and monitor.

Laptop

Press Button 2 to show the Laptop on the projector and monitor.

Document Camera

Press Button 3 to show the Document Camera on the projector and monitor.

DVD/VCR

Press Button 4 to show the DVD/VCR on the projector and monitor.